



CT20102-20

Pos.No.	Part No.	Description	Qty	Remark
1	5002010100101	nut\M5	2	
2	5002010100201	muffle cover	1	
3	5002010100301	muffle assy	1	
4	5002010100401	muffle seal washer	1	
5	5002010100501	muffle bolt	2	
6	5002010100601	screw\M5x10	2	
7	5002010100701	screw\ M5x20	6	
8	5002010200801	cylinder Ass'y	1	Including Pos.9.20-23
9	5002010200901	cylinder	1	
10	5002010101001	in pipe seal washer	1	
11	5002010101101	in pipe	1	
12	5002010101201	screw\M5x12	8	
13	5002010101301	carburetor support	1	
14	5002010101401	screw\M5x14	6	
15	5002010101501	insulating washer	1	
16	5002010101601	air intake flange	1	
17	5002010101701	retainer	1	
18	5002010101801	support washer	1	
19	5002010101901	cylinder seal washer	1	
20	5002010202001	piston ring	2	
21	5002010202101	piston	1	
22	5002010202201	piston pin	1	
23	5002010102301	piston pin circlip	2	
24	5002010102401	needle bearing\NA11x15x12.5	1	
25	5002010202501	needle bearing clip	2	
26	5002010202601	crankshaft connecting rod ass'y	1	
27	5002010102701	semicircular key	1	
28	5002010102801	Vacuum tube	1	
29	5002010102901	Vacuum tube circlip	1	
30	5002010103001	Vacuum nozzle	1	
31	5002010103101	pipe	1	
32	5002010103201	adjust jacket	1	
33	5002010103301	oil seal	1	
34	5002010103401	screw\ M5x30	5	
35	5002010103501	left crankshaft case	1	
36	5002010103601	left shock absorption rubber	1	
37	5002010103701	circlip\35	1	
38	5002010103801	bearing\6202	2	
39	5002010103901	pin	3	
40	5002010104001	crankshaft case gasket	1	
41	5002010104101	right crankshaft case	1	
42	5002010104201	right shock absorption rubber	1	
43	5002010104301	oil seal	1	
44	5002010104401	screw	2	
45	5002010104501	ignition coil	1	
46	5002010104601	ignition coil protective cover	1	
47	5002010104701	oil seal plate	1	
48	5002010104801	screw\M4x8	2	

49	5002010104901	fly wheel	1	
50	5002010105001	nut\M8	1	
51	5002010105101	Easy Starter Ass'y	1	
52	5002010105201	starter handle	1	
53	5002010105301	starter rope	1	
54	5002010105401	rope guide cover	1	
55	5002010105501	starter cover	1	
56	5002010105601	Starter wheel B	1	
57	5002010105701	washer	1	
58	5002010105801	screw	1	
59	5002010105901	spark plug	1	
60	5002010106001	screw	1	
61	5002010106101	front handle	1	
62	5002010106201	screw	1	
63	5002010106301	taper spring	1	
64	5002010106401	taper spring	1	
65	5002010106501	taper spring block	1	
66	5002010106601	chain safeguard	1	
67	5002010106701	screw	1	
68	5002010106801	shock absorption cap	3	
69	5002010106901	screw	8	
70	5002010107001	crankshaft case anti-vibration base	3	
71	5002010107101	tank anti-vibration base	2	
72	5002010107201	fuel tank	1	
73	5002010107301	balancer block	1	
74	5002010107401	balancer	1	
75	5002010107501	spring	1	
76	5002010107601	throttle trigger	1	
77	5002010107701	lock bar	1	
78	5002010107801	handle cover	1	
79	5002010207901	anti-vibration head	1	
80	5002010208001	anti-vibration nut	2	
81	5002010108101	pin	1	
82	5002010108201	screw	1	
83	5002010108301	upper cover	1	
84	5002010108401	pin	1	
85	5002010108501	cover lock	1	
86	5002010108601	air filter cover	1	
87	5002010108701	air filter nut	1	
88	5002010108801	air filter cover plate	1	
89	5002010108901	air filter	1	
90	5002010109001	Idle adjustment guide sleeve	1	
91	5002010109101	carburetor	1	
92	5002010109201	air intake bending tube	1	
93	5002010109301	screw	1	
94	5002010109401	air intake cushion	1	
95	5002010109501	choke rod seat	1	
96	5002010109601	choke rod	1	
97	5002010109701	shock absorption block	1	
98	5002010109801	dust plate	1	

99	5002010109901	accelerator rod	1	
100	5002010110001	fuel pipe	1	
101	5002010110101	pituitary	1	
102	5002010110201	fuel filter	1	
103	5002010110301	fuel tank cap	1	
104	5002010110401	fuel tank cap washer	1	
105	5002010110501	fuel cap retainer	1	
106	5002010110601	screw	1	
109	5002010110901	switch	1	Including Pos.107.108
110	5002010111001	oil cap	1	
111	5002010111101	oil cap washer	1	
112	5002010111201	oil cap retainer	1	
113	5002010111301	Ventilation mouth	1	
114	5002010111401	Ventilation mouth spring	1	
115	5002010111501	Ventilation filter	1	
116	5002010111601	oil tube	1	
117	5002010111701	oil pump	1	
118	5002010111801	oil outlet nozzle	1	
119	5002010111901	screw	2	
120	5002010112001	oil pump cover plate	1	
121	5002010112101	screw	3	
122	5002010112201	worm	1	
123	5002010112301	sponge filter	1	
124	5002010112401	oil filter	1	
125	5002010112501	Needle bearing\12x15x14.5	1	
126	5002010112601	chain wheel	1	
127	5002010112701	Passive disk	1	
128	5002010112801	clutch washer	1	
129	5002010112901	clutch Ass'y	1	
130	5002010113001	shoe block	3	
131	5002010113101	retainer	1	
132	5002010113201	clutch extension spring	1	
133	5002010113301	spiked bumper kit	1	
134	5002010113401	guide bar inner plate	1	
135	5002010113501	guide bar inner plate gasket	1	
136	5002010113601	chain guide block	2	
137	5002010113701	brake Ass'y	1	
138	5002010113801	brake anti-vibration base	1	
139	5002010113901	clip	1	
140	5002010114001	washer	1	
141	5002010114101	brake guard torsion rod spring	1	
142	5002010114201	brake guard	1	
143	5002010114301	limit pin	1	
144	5002010114401	clip	1	
145	5002010114501	baffle pin base	1	
146	5002010114601	baffle pin	1	
147	5002010114701	limit board	1	
148	5002010114801	clip	1	
149	5002010114901	nut	2	
150	5002010115001	Right side cover	1	

151	5002010115101	screw\ 3.9x10	3	
152	5002010115201	brake spring cover	1	
153	5002010115301	assistant lever	1	
154	5002010115401	main lever	1	
155	5002010115501	pin	1	
156	5002010115601	Screw\3.9x8	2	
157	5002010115701	guide bar outer plate	1	
158	5002010115801	tightener screw	1	
159	5002010115901	brake spring belt	1	
160	5002010116001	brake control rod	1	
161	5002010116101	main brake spring	1	
162	5002010116201	assistant brake spring	1	
163	5002010116301	dust shield	1	
164	5002010216401	Guide cover	1	
165	5002010216501	saw chain	1	
166	5002010216601	guide bar	1	